


Samsung SRP-270 to QuickStore POS

Cable & Connections

PC DB-9F	Printer DB-25M		
DCD	1	1	NC
RXD	2	2	TXD
TXD	3	3	RXD
DTR	4	4	RTS
GND	5	5	CTS
DSR	6	6	DSR
RTS	7	7	GND
CTS	8	8	CD
VCC	9	20	DTR

Serial Printer Cable

CRS Part No. 522087

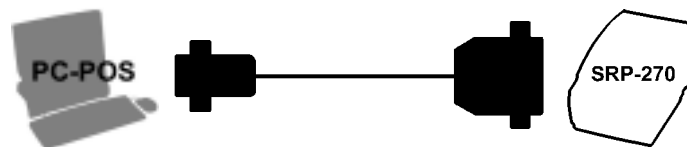

DIP Switch Settings

SW1	ON							X	
	OFF	X	X	X	X	X	X		X
		1	2	3	4	5	6	7	8

SW2	ON								
	OFF	X	X	X	X	X	X	X	X
		1	2	3	4	5	6	7	8

1	OFF (Emulation)	1	OFF (Data receive error)
2	OFF (Emulation)	2	OFF (Reserved)
3	ON (Auto cutter on) OFF (Auto cutter off)	3	OFF (Handshaking)
4	OFF (one pen/two pen)	4	OFF (Word length)
5	OFF (reserved)	5	OFF (Parity check)
6	OFF (reserved)	6	OFF (Parity selection)
7	ON (Near end sensor)	7	OFF (BAUD rate selection)
8	OFF (Low ink check)	8	OFF (BAUD rate selection)

Special Instructions

[Basic Set Up Instructions]

Under Quickstore->File>Printer Setup. . . ->Sales menu option, use the following configuration:

Printer: Generic/Text only

Type: Receipt

Model: Epson or Epson with Auto-cutter

Print On: Receipt Paper (continuous)

Note: If dip switch #3 (auto-cut) is set to on, set Quickstore's Model to "Epson with Auto-cutter."